



Mod.	kW	Volt	Ampere	Hz	Cable	NOTE
_60/30 FRE	7,5	380-415 V 3N	11,5	50-60	5G1,5 mm ²	
_60/30 FRE/P...	9	380-415 V 3N	14	50-60	5G2,5 mm ²	
_60/60 FRE 2M	7,5 + 7,5	380-415 V 3N	11,5 + 11,5	50-60	5G1,5 mm ² + 5G1,5 mm ²	
_60/60 FRE/P 2M	9 + 9	380-415 V 3N	14 + 14	50-60	5G2,5 mm ² + 5G2,5 mm ²	

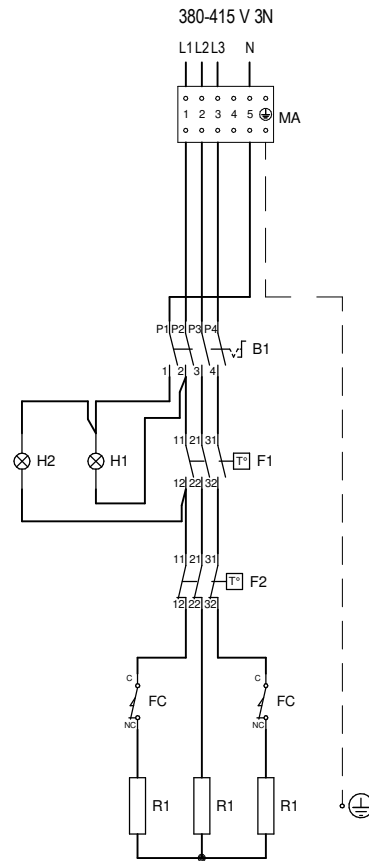

B1	INTERRUTTORE _ INTERRUPTEUR SWITCH _ SCHALTER _ INTERRUPTOR
F1	TERMOSTATO _ THERMOSTAT TERMOSTATO
F2	TERMOSTATO SICUREZZA _ THERMOSTAT DE SECURITE SAFETY THERMOSTAT _ TEMPERATURBEGRENZER _ TERMÓSTATO DE SEGURIDAD
FC	MICROINTERRUTTORE _ MICROINTERRUPTEUR MICROSWITCH _ SICHERUNGSSCHALTER _ MICROINTERRUPTOR
H1	SPA VERDE _ LAMPE TMOIN VERTE GREEN LIGHT _ GRUENE KONTROLLAMPE _ INDICADOR LUMINOSO VERDE

H2	LAMPADA SPIA ARANCIO _ LAMPE TMOIN ORANGE _ ORANGE INDICATOR LIGHT _ ORANGE KONTROLLAMPE _ INDICADOR LUMINOSO NARANJA
MA	MORSETTIERA ARRIVO LINEA _ POWER INLET TERMINAL BOARD ANSCHLUSSBRETT _ BORNES ARRIVE LIGNE _ BLOQUE TERMINAL LÍNEA
R1	RESISTENZA _ HEATING ELEMENT HEIZKÖRPER _ RESISTANCE _ RESISTENCIA

Mod.	kW	Volt	Ampere	Hz	Cable	NOTE
_60/60 FRE	15	380-415 V 3N	23	50-60	5G4 mm ²	
_60/60 FRE/P...	18	380-415 V 3N	27,5	50-60	5G4 mm ²	

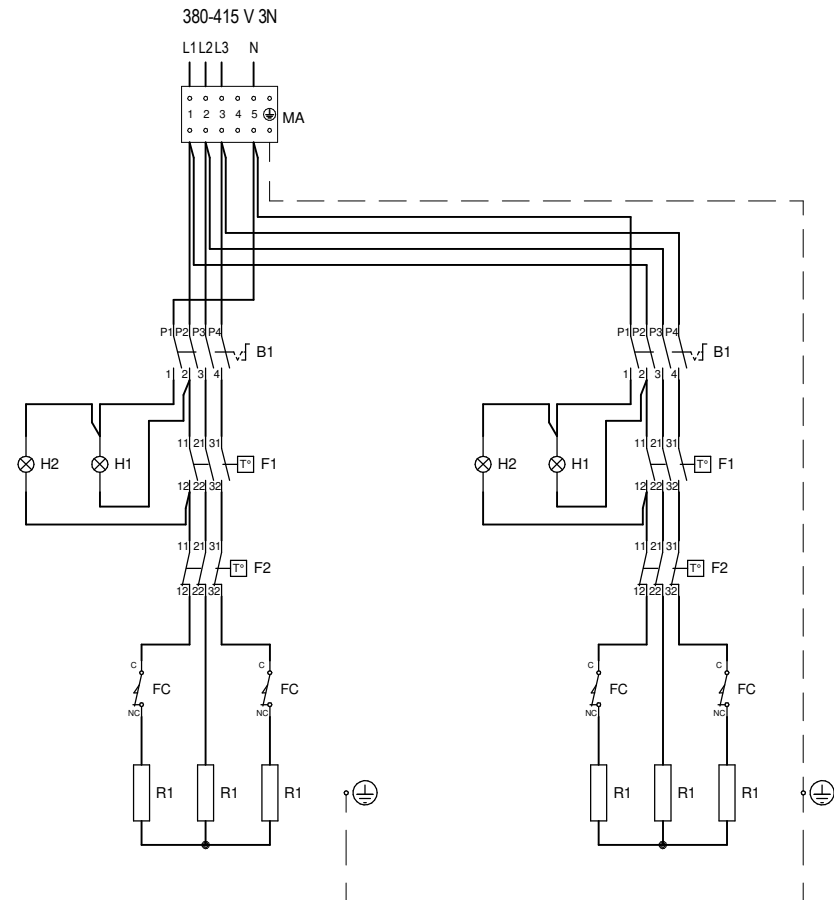

 PRIMA DI INTERVENIRE SULL'APPARECCHIATURA, SCOLLEGARE L'ALIMENTAZIONE ELETTRICA. - UNPLUG THE POWER SUPPLY BEFORE OPERATING ON THE APPLIANCE. - BEVOR ANSAT ARBEITEN AUSSSCHALTEN SIE DIE ELEKTRISCHE SPEISUNG. - AVANT D'INTERVENIR SUR L'APPAREIL, DECONNECTEZ L'ALIMENTATION ELECTRIQUE. - DESCONECTAR EL ALIMENTACION ANTES CUALQUIER INTERVENCION SOBRE EL APARATO			
DISEGNATO / DESIGNER LOT F.	CONTROLLATO / CONTROLLER LOT F.	DATA / DATE 06/05/2014	PAG. 1 / 1
MODELLO TYPE FRIGGITRICE ELETTRICA _ FRITEUSE _ ELECTRIC FRYER _ ELEKTRO FRITEUSE _ FREIDORA ELÉCTRICA		CODICE / CODE  2511018.00	